

**HiFuture**

# FlyBuds4 ANC

TWS Earbuds

User Manual

Copyright: HiFuture. All rights reserved.  
HiFuture, the HiFuture logo and other HiFuture marks are all owned and registered by  
SHENZHEN FUTURE ACCESS TECHNOLOGY CO., LIMITED. All other trademarks are  
the property of their respective owners.  
The information contained here is subject to change without prior notice.

EN



**EN** Multi Language User Manual Download QR CODE Password for FlyBuds4 ANC:  
**HiFuture-FB4A**

**GR** Κωδικός πρόσβασης κωδικού QR για τη λήψη του πολυγλωσσικού εγχειριδίου  
χρήσης του FlyBuds4 ANC: **HiFuture-FB4A**

**TR** Çok Dilli Kullanım Kılavuzu FlyBuds4 ANC için QR KOD Şifresini İndirin:  
**HiFuture-FB4A**

**UA** Завантажте багатомовний посібник користувача для FlyBuds4 ANC  
зісканувавши QR CODE. Пароль: **HiFuture-FB4A**

**FR** Manuel d'utilisation multilingue Télécharger le code QR Mot de passe pour  
FlyBuds4 ANC : **HiFuture-FB4A**

**BS** Višejezični korisnički priručnik Preuzimanje QR KOD Lozinka za FlyBuds4 ANC:  
**HiFuture-FB4A**

## PACKAGE LIST



 
FlyBuds4 ANC



Charging Case



User Manual





Type-C Charging Cable

Please refrain from using any damaged components.  
Please contact your local authorized HiFuture dealer/customer service  
with any questions.


## DEVICE OVERVIEW

 1. Tap area
2. Earbuds indicator
3. Sound leakage hole
4. Talking Microphone
5. Charging interface
6. Earbuds case indicator
7. TYPE C Charging port

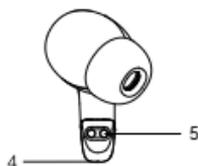


## IMPORTANT NOTES


- 1 Before using the FlyBuds4 ANC wireless earbuds, please charge both the case and earbuds.
- 2 If both earbuds don't sync together, please reset the earbuds.

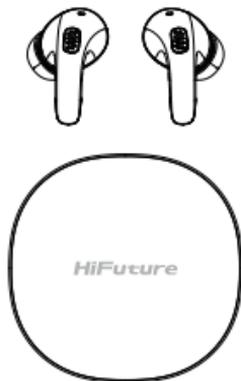

- 3 If the earbuds don't charge, please clean the charging slot on the case and the contact surface on the earbuds.

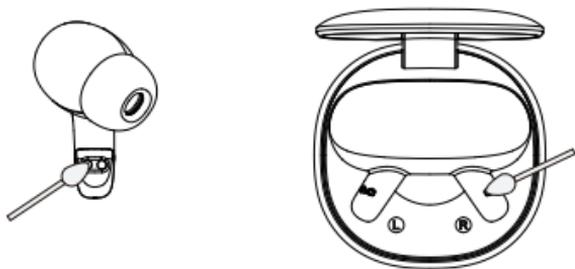

## POWER ON

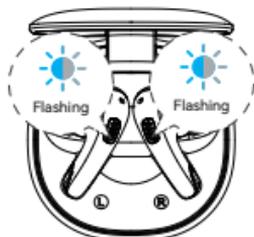

Automatically

Make sure both earphones are in the charging case, then open the charging case lid, the white indicator light on the earphones flashes, indicating that the earphones are powered on.

## POWER OFF



Automatically

Put the two earphones into the charging box, close the lid, and turn off the earphones. The earphones will automatically turn off if they are not connected for 5 minutes.

## WEARING




**1** Put the earbuds into your ears.



**2** Rotate the earbuds to adjust to the comfortable angle.

# CHARGING

Please fully charge the FlyBuds4 ANC after unboxing. Use Type-C cable to charge the charging case.

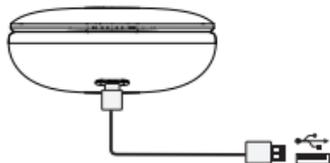

## INDICATORS' DESCRIPTIONS

### 1. Earbuds

Power on	Pairing	Connected	Battery low
LED white light flashes	LED white light flashes	LED OFF	LED white light flashes once every 15s



### 2. Reset Indicators

After the earbuds is reset successfully, the white indicator light flashes 3 times per second and then flashes once per second.

### 3. Charging Case

Battery low	Put earbuds into the case
The white indicator light flashes once every 15s	White indicator lights on, and auto turn off after buds been fully charged



### 4. Charging by external TYPE-C cable

Charging	Fully charge
Indicator flashes white	Indicator always on white

## TAP CONTROL

Play/Pause



Press 2 times(L/R)

Activate or deactivate  
the voice assistant



Press 3 times(L/R)

Answer/End a call



Press 2 time(L/R)

Reject a call



Press 1.5 seconds(L/R)

Cancel dial




Press 2 time(L/R)

Factory Reset



Press 6 times(L/R)

ANC ON/OFF/Transparency

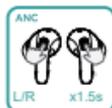

Press 1.5 seconds(L/R)

## CONNECT THE EARBUDS



- 1 Power on the earbuds and turn on the wireless connection in your phone.
- 2 Tap "FlyBuds4 ANC" from the smartphone's wireless connection menu. There's a voice prompt after succeed connection with smartphone, and the indicator will be off automatically.




## HOW TO RESET THE EARBUDS

If your earbuds stop syncing with each other, please follow below steps to reset the earbuds:

- 1 Make sure the FlyBuds4 ANC were disconnected with wireless connection devices.



- 2 When the device is not connected, take out the earbuds, tap the left or right earbuds 6 times quickly, the white indicator light flashes 3 times per second and then flashes once per second, and the earbuds emit a prompt tone, indicating that the earbuds have been reset successfully and re-entered pairing mode.

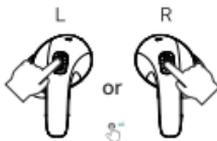

- 3 When the devices are connected, take out the earbuds, press and hold the left and right earbuds at the same time for 5s. The white indicator will flash once per second and you can hear a prompt tone, indicating that the earbuds have been reset successfully and re-entered pairing mode.

# HiFuture

MAKES LIFE MORE VALUABLE

## SIMPLIFIED EU DECLARATION OF CONFORMITY

Hereby, SHENZHEN FUTURE ACCESS TECHNOLOGY CO., LIMITED declares that the radio equipment type HiFuture earbuds. mentioned in this manual is in compliance with Directive 2014/53/EU.

Manufacturer: SHENZHEN FUTURE ACCESS TECHNOLOGY CO., LIMITED  
Address: 1503, Block F, Tsinghua Tongfang Information Harbor, No.11 Langshan Road, Hi-Tech Park (North), Nanshan District, Shenzhen, Guangdong, China

EC	REP
----	-----

eVatmaster Consulting GmbH  
Bettinastr. 30  
60325 Frankfurt am Main, Germany  
contact@evatmaster.com

UK	AR
----	----

HUA TENG LIMITED  
3 Glass Street, Hanley,  
Stoke On Trent, ST1 2ET  
United Kingdom



**HiFuture**  
MAKES LIFE  
MORE VALUABLE

Join Us:  
@hifuturegroup /



For more information, please visit:

[www.hifuturegroup.com](http://www.hifuturegroup.com)



For any assistance, email us:

[info@hifuturegroup.com](mailto:info@hifuturegroup.com)

